
### 210:1 Micro Metal Gearmotor HPCB 12V with Extended Motor Shaft



This gearmotor is a miniature **high-power**, 12 V brushed DC motor with **long-life carbon brushes** and a 210.59:1 metal gearbox. It has a cross section of  $10 \times 12$  mm, and the D-shaped gearbox output shaft is 9 mm long and 3 mm in diameter. This version also has a  $4.5 \times 1$  mm **extended motor shaft**.

Key specs at 12 V: 140 RPM and 100 mA with no load, 50 oz-in (3.6 kg-cm) and 0.8 A at stall.

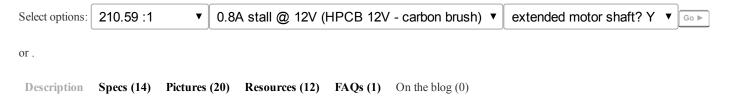

## **Overview**

These tiny brushed DC gearmotors are available in a wide range of gear ratios—from 5:1 up to 1000:1—and with five different motors: high-power 6 V and 12 V motors with long-life carbon brushes (HPCB), and high-power (HP), medium power (MP), and low power (LP) 6 V motors with shorter-life precious metal brushes. The 6 V and 12 V HPCB motors offer the same performance at their respective nominal voltages, just with the 12 V motor drawing half the current of the 6 V motor. The 6 V HPCB and 6 V HP motors are identical except for their brushes, which only affect the lifetime of the motor.


The HPCB versions (shown on the left in the picture below) can be differentiated from versions with precious metal brushes (shown on the right) by their copper-colored terminals. Note that the HPCB terminals are 0.5 mm wider than those on the other micro metal gearmotor versions (2 mm vs. 1.5 mm), and they are about 1 mm closer together (6 mm vs. 7 mm).





Versions of these gearmotors are also available with an additional 1 mm-diameter output shaft that protrudes from the rear of the motor. This 4.5 mm-long rear shaft rotates at the same speed as the input to the gearbox and offers a way to add an encoder, such as our **magnetic encoder for micro metal gearmotors** (see the picture on the right), to provide motor speed or position feedback.

With the exception of the 1000:1 gear ratio versions, all of the micro metal gearmotors have the same physical dimensions, so one version can be easily swapped for another if your design requirements change. Please see the **micro metal gearmotor comparison table** for detailed specifications of all our micro metal gearmotors. This dynamically-sortable table can help you find the gearmotor that offers the best blend of speed, torque, and current-draw for your particular application. A more basic comparison table is available below.

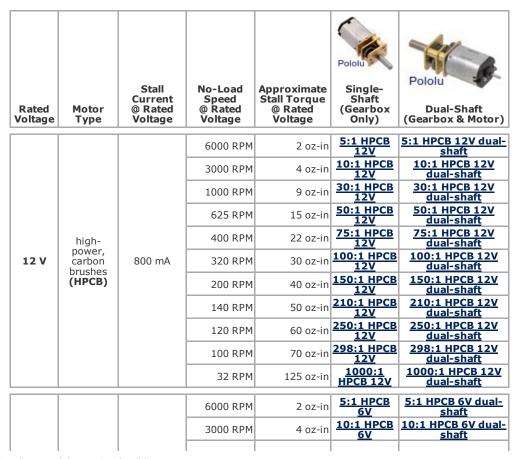



/23	/2016			Pololu -	210:1 Micro Me	tal Gearmotor I	HPCB 12V with Extended
	6 V	high- power, carbon brushes (HPCB)	1600 mA	1000 RPM	9 oz-in	30:1 HPCB 6V	30:1 HPCB 6V dual- shaft
				625 RPM	15 oz-in	50-1 HDCB	50:1 HPCB 6V dual- shaft
				400 RPM	22 oz-in	<u>6 V</u>	75:1 HPCB 6V dual- shaft
				320 RPM		100:1 HPCB 6V	100:1 HPCB 6V dual-shaft
				200 RPM	40 oz-in	150:1 HPCB 6V	150:1 HPCB 6V dual-shaft
				140 RPM	50 oz-in	210:1 HPCB 6V	210:1 HPCB 6V dual-shaft
				120 RPM	60 oz-in	250:1 HPCB 6V	250:1 HPCB 6V dual-shaft
				100 RPM	70 oz-in	298:1 HPCB 6V	298:1 HPCB 6V dual-shaft
				32 RPM	125 oz-in	1000:1 HPCB 6V	1000:1 HPCB 6V dual-shaft
	6 V	high-power (HP) (same specs as 6V HPCB above)	1600 mA	6000 RPM	2 oz-in	5:1 HP 6V	5:1 HP 6V dual- shaft
				3000 RPM	4 oz-in	10:1 HP 6V	10:1 HP 6V dual- shaft
				1000 RPM	9 oz-in	30:1 HP 6V	30:1 HP 6V dual- shaft
				625 RPM	15 oz-in	50:1 HP 6V	50:1 HP 6V dual- shaft
				400 RPM	22 oz-in	75:1 HP 6V	75:1 HP 6V dual- shaft
				320 RPM	30 oz-in	100:1 HP 6V	100:1 HP 6V dual- shaft
				200 RPM	40 oz-in	150:1 HP 6V	150:1 HP 6V dual- shaft
				140 RPM	50 oz-in	210:1 HP 6V	210:1 HP 6V dual- shaft
				120 RPM	60 oz-in	250:1 HP 6V	250:1 HP 6V dual- shaft
				100 RPM	70 oz-in	298:1 HP 6V	298:1 HP 6V dual- shaft
				32 RPM	125 oz-in	1000:1 HP 6V	1000:1 HP 6V dual- shaft
	6 V	medium- power ( <b>MP</b> )	700 mA	4400 RPM	1.5 oz-in		5:1 MP 6V dual- shaft
				2200 RPM	3 oz-in	10:1 MP 6V	10:1 MP 6V dual- shaft
				730 RPM	8 oz-in	30:1 MP 6V	30:1 MP 6V dual- shaft
				420 RPM	12 oz-in	50:1 MP 6V	50:1 MP 6V dual- shaft
				290 RPM	17 oz-in	75:1 MP 6V	75:1 MP 6V dual- shaft
				220 RPM	21 oz-in	100:1 MP 6V	100:1 MP 6V dual- shaft
				150 RPM	28 oz-in	150:1 MP 6V	150:1 MP 6V dual- shaft
				100 RPM	36 oz-in		210:1 MP 6V dual- shaft
				90 RPM	41 oz-in	200.1 MD	250:1 MP 6V dual- shaft
				75 RPM	46 oz-in	298:1 MP	298:1 MP 6V dual- shaft 1000:1 MP 6V dual-
				22 RPM	80 oz-in	1000:1 MP 6V	shaft
	6 V	low-power ( <b>LP)</b>	360 mA	2500 RPM	1 oz-in	5:1 LP 6V	5:1 LP 6V dual- shaft
				1300 RPM	2 oz-in	10:1 LP 6V	10:1 LP 6V dual- shaft
				440 RPM	4 oz-in	30:1 LP 6V	30:1 LP 6V dual- shaft
				250 RPM	7 oz-in	50:1 LP 6V	50:1 LP 6V dual- shaft
				170 RPM	9 oz-in	75:1 LP 6V	75:1 LP 6V dual- shaft
				120 RPM	12 oz-in	100:1 LP 6V	100:1 LP 6V dual- shaft
				85 RPM	17 oz-in	150:1 LP 6V	150:1 LP 6V dual- shaft
				60 RPM	27 oz-in	210:1 LP 6V	210:1 LP 6V dual- shaft
				50 RPM	32 oz-in	250:1 LP 6V	250:1 LP 6V dual- shaft
				45 RPM	40 oz-in	298:1 LP 6V	298:1 LP 6V dual- shaft
- 1				1			

14 RPM 70 oz-in 3000:1 LP 1000:1 LP 6V dual-6V shaft

**Note:** Stalling or overloading gearmotors can greatly decrease their lifetimes and even result in immediate damage. The recommended upper limit for instantaneous torque is 35 oz-in (2.5 kg-cm) for the 1000:1 gearboxes and 25 oz-in (2 kg\*cm) for all the other gear ratios; we strongly advise keeping applied loads well under this limit. Stalls can also result in rapid (potentially on the order of seconds) thermal damage to the motor windings and brushes, especially for the versions that use high-power (HP and HPCB) motors; a general recommendation for brushed DC motor operation is 25% or less of the stall current.

In general, these kinds of motors can run at voltages above and below their nominal voltages; lower voltages might not be practical, and higher voltages could start negatively affecting the life of the motor.


### Details for item #3054

Exact gear ratio: 
$$\frac{25\times34\times34\times35\times38}{12\times9\times13\times13\times10}\approx\textbf{210.59:1}$$

#### **Gearmotor Dimensions**


In terms of size, these gearmotors are very similar to Sanyo's popular 12 mm NA4S DC gearmotors, and gearmotors with this form factor are occasionally referred to as N20 motors. The versions with carbon brushes (HPCB) have slightly different terminal and end-cap dimensions than the versions with precious metal brushes, but all of the other dimensions are identical.

## Dimensions of versions with carbon brushes (HPCB)

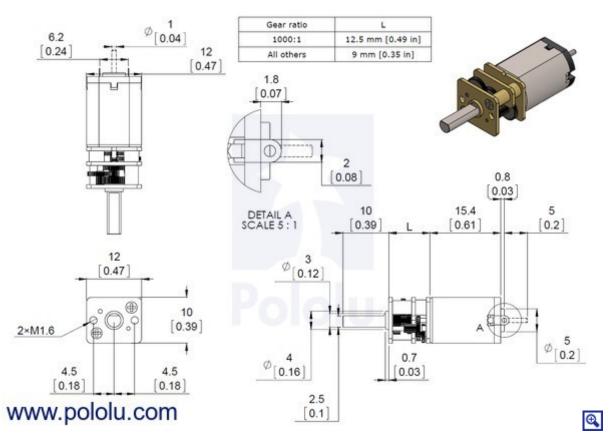

Dimensions of the Pololu micro metal gearmotors with carbon brushes (HPCB). Units are mm over [inches].

## Dimensions of versions with precious metal brushes (LP, MP, and HP)

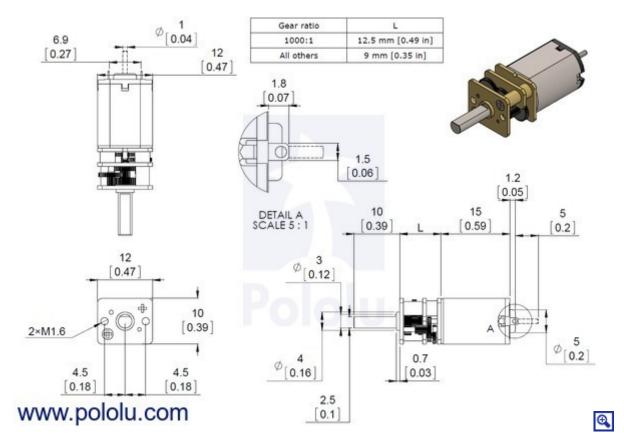

Dimensions of the Pololu micro metal gearmotors with precious metal brushes: low-power (LP), medium-power (MP), and high-power (HP). Units are mm over [inches].

These diagrams are also available as a downloadable PDF (262k pdf).

#### **Motor Accessories**

• Wheels and hubs: The micro metal gearmotor's output shaft matches our assortment of <u>Pololu wheels</u> and the <u>Solarbotics RW2i rubber</u> <u>wheel</u>. You can also use our <u>Pololu universal mounting hubs</u> to mount custom wheels and mechanism to the micro metal gearmotor's output shaft, and you can use our <u>12mm hex wheel adapter</u> to use this motor with many common hobby RC wheels.



Pololu wheel 32×7mm on a micro metal gearmotor.



Black Pololu 70×8mm wheel on a Pololu micro metal gearmotor.



A pair of Pololu universal aluminum mounting hubs for 3 mm diameter shafts.



12mm Hex Wheel Adapter for 3mm Shaft on a Micro Metal Gearmotor.

• Mounting brackets: Our mounting bracket (also available in white) and extended mounting bracket are specifically designed to securely mount the gearmotor while enclosing the exposed gears. We recommend the extended mounting bracket for wheels with recessed hubs, such as the Pololu wheel 42×19mm. Our micro metal gearmotors will also work with our 15.5D mm metal gearmotor bracket pair.



Black micro metal gearmotor mounting bracket pair with included screws and nuts.



White micro metal gearmotor mounting bracket pair with included screws and nuts.



Pololu micro metal gearmotor bracket extended with micro metal gearmotor.

• Quadrature encoders: We offer several quadrature encoders that work with our micro metal gearmotors.



Magnetic Encoder Kit for Micro Metal Gearmotors assembled with ribbon cable wires.



Example of an installed micro metal gearmotor reflective optical encoder.



Encoder for Pololu wheel 42×19mm with wheel, motor, and bracket.

Note: The HPCB versions of our micro metal gearmotors are not compatible with our #2590 and #2591 optical encoders or our older #2598 magnetic encoders (the terminals are too wide to fit through the corresponding holes in the encoder boards). However, they are compatible with our newer #3081 magnetic encoders.

• Motor controllers and drivers: We have a number of motor controllers, motor drivers, and robot controllers that make it easy to drive these micro metal gearmotors. For the 6 V micro metal gearmotors, consider the <u>DRV8838 single-channel motor driver carrier</u>, the <u>DRV8833 dual motor driver carrier</u> (or <u>DRV8835 shield for Arduino</u>). For the 12 V micro metal gearmotors, consider the <u>MAX14870 single-channel motor driver carrier</u>, <u>DRV8801 single-channel motor driver carrier</u>, and <u>A4990 dual motor driver carrier</u> (or <u>A4990 shield for Arduino</u>).



We also incorporate these motors into some of our products, including our **Zumo robot** and **3pi robot**:



Assembled Zumo 32U4 robot.

Pololu 3pi robot.

# **Selecting the Right Gearmotor**

We offer a wide selection of metal gearmotors that offer different combinations of speed and torque. Our <u>metal gearmotor comparison table</u> can help you find the motor that best meets your project's requirements.



Some of the Pololu metal gearmotors.

## **Related products**



Magnetic Encoder Pair Kit for Micro Metal Gearmotors, 12 CPR, 2.7-18V (HPCB compatible)



Optical Encoder Pair Kit for Micro Metal Gearmotors, 5V



Pololu 42×19mm Wheel and Encoder Set



Pololu Micro Metal Gearmotor Bracket Extended Pair



Pololu Micro Metal Gearmotor Bracket Pair - Black



Pololu 15.5D mm Metal Gearmotor Bracket Pair



Pololu Micro Metal Gearmotor Bracket Pair - White



Machine Screw: M1.6, 3mm Length, Phillips (6-pack)



Pololu Universal Aluminum Mounting Hub for 3mm Shaft, M3 Holes (2-Pack)



Pololu Universal Aluminum Mounting Hub for 3mm Shaft, #2-56 Holes (2-Pack)



12mm Hex Wheel Adapter for 3mm Shaft (2-Pack)





Pololu 5" Robot Chassis RRC04A Solid Red



Pololu 22T Track Set





Solarbotics RW2i Wheel (internal set screw)



Pololu Simple Motor Controller 18v7 (Fully Assembled)



Pololu Qik 2s9v1 Dual Serial Motor Controller



**DRV8833 Dual Motor Driver Carrier** 



**DRV8838 Single Brushed DC Motor Driver Carrier** 



**DRV8835 Dual Motor Driver Carrier** 



TB6612FNG Dual Motor Driver Carrier



Orangutan SVP-1284 Robot Controller (assembled)



Orangutan SV-328 Robot Controller



**Baby Orangutan B-328 Robot Controller** 



26:1 Sub-Micro Plastic Planetary Gearmotor 6Dx16L mm



136:1 Sub-Micro Plastic Planetary Gearmotor 6Dx19L mm



Pololu 6V Step-Up Voltage Regulator U3V50F6





Zumo Robot for Arduino, v1.2 (Assembled with 75:1 HP Motors)



Pololu 3pi Robot



Ceramic Capacitor 6-Pack 0.1uF 50V

# **Related categories**



12V High-Power Carbon Brush (HPCB) Micro Metal Gearmotors



Micro Metal Gearmotors with Extended Motor Shafts



**Micro Metal Gearmotors** 



**Pololu Wheels and Tracks** 



**Brushed DC Motor Controllers** 



**Brushed DC Motor Drivers** 



**Robot Controllers** 



**Current Sensors** 



Pololu 5" Robot Chassis RRC04A



**Zumo Robots and Accessories** 



3mm Shaft Gearmotors



25D mm Gearmotors



37D mm Gearmotors